


(810) 686-4035

www.ameristep.com


TAKE DOWN INSTRUCTIONS

! **IMPORTANT:** Be sure to remove all native brush, dirt and debris **BEFORE** beginning take down.

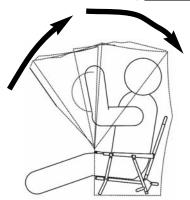





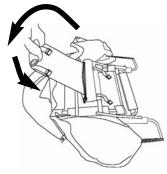


Your Chair Blind should look like this.

Step 3: Fold Chair together.

Step 4: Unzip pouch and unroll pack.

Step 1: Sit in Chair. Grab Blind and pull it back over your head until it falls behind chair.

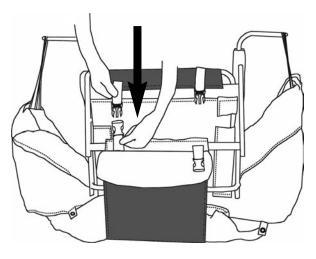

Step 5: Wrap pack underneath chair and bring up and over so you can secure both buckles. This holds the chair together.

Step 6: Backpack straps should be orientated on the backrest side of the chair. Buckles can be adjusted to fit as needed.

STORAGE AND TIPS

- Store Blind in a cool dry place free native brush, dirt and any debris
- · Never store Blind wet or damp
- Avoid leaving Blind outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.
- To stop any leakage, use seam sealer on all seams and silicon spray on seams/sidewalls.

WARNING

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM TENT FABRIC.

The fabric will burn if left in continuous contact with a flame source. It is not fireproof. Do not use candles, matches or open flames of any kind in or near a tent; do not cook inside a tent; do not smoke in a tent; do not store flammable liquids inside a tent; build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night; exercise extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery operated lanterns whenever possible; do not refuel lamps, heaters or stoves inside a tent; extinguish or turn off all lanterns before going to sleep.

